




Fire Door Damper Kit

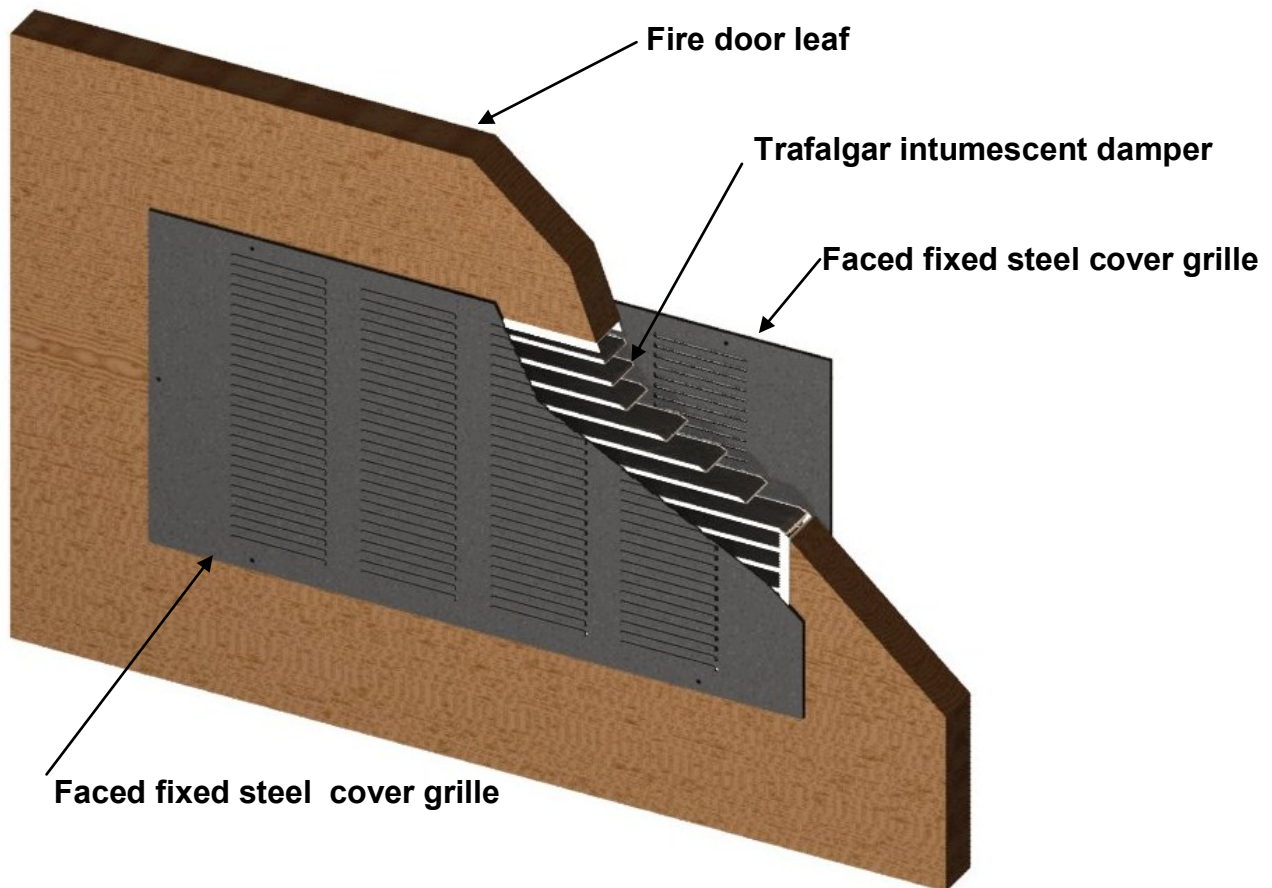

INSTRUCTIONS

1. Ensure the fire door leaf is approved for use with Trafalgar's Fire Door Damper Kit.
2. Ensure that the door thickness is no less than 35mm.
3. The door cutout size to have a 5mm perimeter clearance, ie a 600 x 300 kit has a cut-out size of 610 x 310. Mark out the location and size of the damper kit on the centerline of the door leaf. The damper must be at least 150mm from any edge of the door leaf.
4. Cut the opening into the door leaf
5. Place the damper cell into the opening and apply Trafalgar Fyreflex sealant to the surrounding perimeter gap on both sides of the door. Ensure a sufficient quantity of sealant is used to fully seal all gaps and to 'bond' the damper in place.
6. Fix the cover grilles over the damper cell on both sides of the door leaf using the included fixing screws.