



# Trafalgar Cabinet Toxic Substance Storage 100L TCTSS100L

Painted inside and out eliminating corrosion issues.

Three point self latching locking system. Easy grip handle for opening of cabinet. Lock keyed to 92268.

Continuous piano hinge ensuring smooth closure of door

Ventilation port with built in flame arrestor

Self closing mechanism, easily replaced should door be damaged

Welded shelf brackets that fully interlock with shelves.

Fully adjustable galvanised shelf perforated for any leakages. Easily replaced if damaged




Ventilation port with built in flame arrestor

Danger alert sign indicating specific hazardous substances stored in cabinet

Self closing self latching doors

Built in ground connector

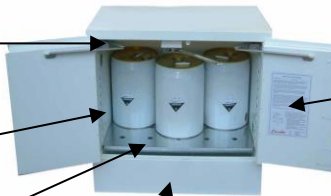

Full instructions on usage of the cabinet attached to the inside of the door

Round corners on doors

Fully welded 150mm deep liquid tight sump, capable of containing at least 25% of the maximum storage capacity.

Part Number	Capacity (L)	Shelves	External Height (mm)	External Width (mm)	External Depth (mm)	Internal Height (mm)	Internal Width (mm)	Internal Depth (mm)	Weight (kg)
BCTSS100L	100	1	800	920	615	520	835	530	102

### Australian Standard

All cabinets comply with AS4452:1997 as follows.

1. Each cabinet is marked with the name and address of the manufacturer
2. The maximum storage capacity.
3. Any other notices or warnings that are required by relevant regulatory authorities with a minimum height of 50mm

### Storage

Suitable for safe storage of toxic substances as listed as Class 6.1 substances in the ADG code or are a primary risk of another class or are a subsidiary risk of 6.1.

### Options

Full range of spare parts including additional shelves, closing mechanisms etc. available.



Phone: 1800 888 714  
 Email: sales@tfire.com.au  
 Website: www.tfire.com.au

Trafalgar reserves the right to change specifications without notice. Please check with your supplier at the time of order.