



Trafalgar Cabinet Toxic Substance Storage 250L TCTSS250L

Painted inside and out eliminating corrosion issues.

Three point self latching locking system. Easy grip handle for opening of cabinet. Lock keyed to 92268.


Continuous piano hinge ensuring smooth closure of doors

Ventilation port with built in flame arrestor

Welded shelf brackets that fully interlock with shelves. 40mm spacing between brackets

Fully adjustable galvanised shelf perforated for any leakages. Easily replaced if damaged

Fully welded 150mm deep liquid tight sump capable of containing at least 25% of the maximum storage capacity.

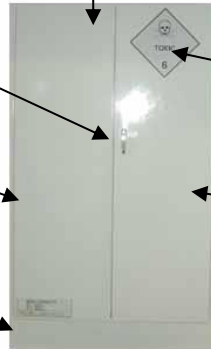

Ventilation port with built in flame arrestor

Danger alert sign indicating specific hazardous substances stored in cabinet


Self closing self latching doors

Built in ground connector

Self closing mechanism, easily replaced should door be damaged

Full instructions on usage of the cabinet attached to the inside of the door

Round corners on doors

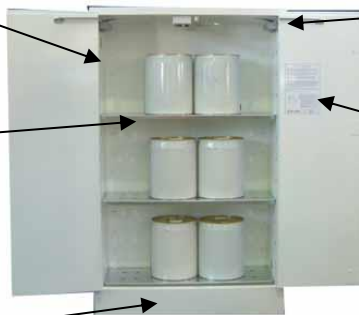

Part Number	Capacity (L)	Shelves	External Height (mm)	External Width (mm)	External Depth (mm)	Internal Height (mm)	Internal Width (mm)	Internal Depth (mm)	Weight (kg)
BCTSS250L	250	3	1825	1100	500	1545	1015	420	187

Australian Standard

All cabinets comply with AS4452:1997 as follows.

1. Each cabinet is marked with the name and address of the manufacturer
2. The maximum storage capacity.
3. Any other notices or warnings that are required by relevant regulatory authorities with a minimum height of 50mm

Storage

Suitable for safe storage of toxic substances as listed as Class 6.1 substances in the ADG code or are a primary risk of another class or are a subsidiary risk of 6.1.

Options

Full range of spare parts including additional shelves, closing mechanisms etc. available.



TRAFALGAR

CABINETS

Phone: 1800 888 714
Email: sales@tfire.com.au
Website: www.tfire.com.au

Trafalgar reserves the right to change specifications without notice. Please check with your supplier at the time of order.